

CONVERSION CHART

<u>MICRO-MESH ALUMINUM OXIDE</u>	<u>MICRO-MESH CUSHIONED ABRASIVE REGULAR</u>	<u>MICRO-MESH CUSHIONED ABRASIVE MX</u>	<u>MICRO-MESH CUSHIONED DIAMOND ABRASIVE</u>	ANSI OR CAMI USA	FEPA OR EURO	APEX OR STRUCTURED ABRASIVES	MICRON
For Solid Surface Countertops & Aluminum Polishing	For Plastics, Wood, Composites, Urethanes and Soft Materials	For Metal Finishing and Hard Materials	For Hard Metal, Alloys, Ceramic and Granite/Marble	-	-	-	-
					P120		125
						A-160	
				120			
					P150	A-130	100
				150			
300 AO			120 MXD	180	P180		80
						A-100	
				200	P220		65
			180 MXD				
		60 MX			P240	A-80	60
		80 MX					
		100 MX			P280		
		120 MX			P320	A-65	52
				240			50
		150 MX		280	P360		45
600 AO		180 MX		320			
					P400	A-45	42
			280 MXD		P500		
800 AO				360			
					P600	A-35	40
1500 AO	1500			400		A-30	30
		240 MX	400 MXD		P800		
				500	P1000		20
			500 MXD		P1200	A-16	
1800 AO	1800			600			15
				800	P1500	A-10	13
2400 AO	2400	320 MX					
		360 MX	600 MXD		P2000	A-06	10
			800 MXD	1000			
		400 MX	1200 MXD		P2500		9
3200 AO	3200			1200			
3600 AO	3600			1350			8
4000 AO	4000	600 MX	1500 MXD	1500		A-05	5
6000 AO	6000	800 MX					4
8000 AO	8000	1200 MX					3
12000 AO	12000		1800 MXD				

**ACHIEVE
MIRROR
FINISHES
WITHOUT
BUFFING!**



MICRO-MESH AND ACHIEVE HIGH GLOSS FINISHES WITHOUT BUFFING

PERFECT
FOR
WATERBASE
FINISHES

*Contact us for
samples.
Available in
sheets, rolls,
and discs.*



www.micro-surface.com

800-225-3006 or 563-732-3240



MICRO-SURFACE

FINISHING PRODUCTS, INC.

QUALITY FINISHING PRODUCTS FOR FINE INSTRUMENTS

When a musician chooses an instrument, his first impression is the quality of its finish. Let Micro-Surface Finishing Products help you achieve the finish a hand-made instrument deserves. Our products have been used for decades on the finest violins, violas, cellos, basses, and guitars. Approved for use on Stradivari, you can be assured of a finish you can be proud of.

 **WOOD**

 **RESIN**

 **VARNISH**



 **METAL**

 **ACRYLIC**

 **PAINT**



Micro-Mesh™ is a cloth backed cushioned abrasive that leaves a scratch pattern so uniform, it is undetectable by the naked eye. Our large abrasive crystals recede into a specially formulated resilient cushioning layer when pressure is applied, allowing them to cut with a positive rake and even planing action. Less heat generation and loading are added benefits of Micro Mesh. Grades of material are available from 1500 - 12000, and can be washed out and used over and over again. Micro-Mesh lasts up to 7 times longer than conventional abrasives and is available in rolls, sheets, discs, belts and sanding sticks.

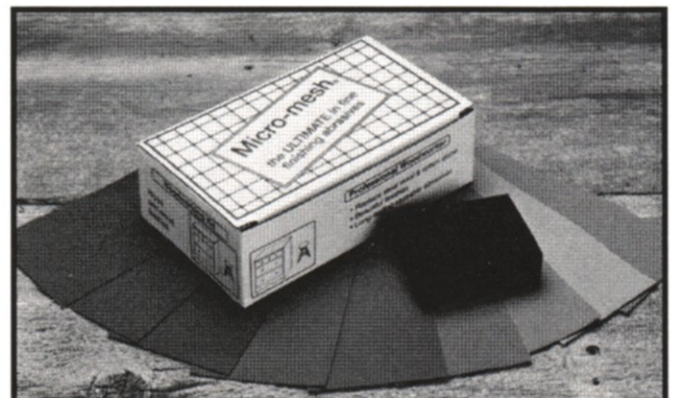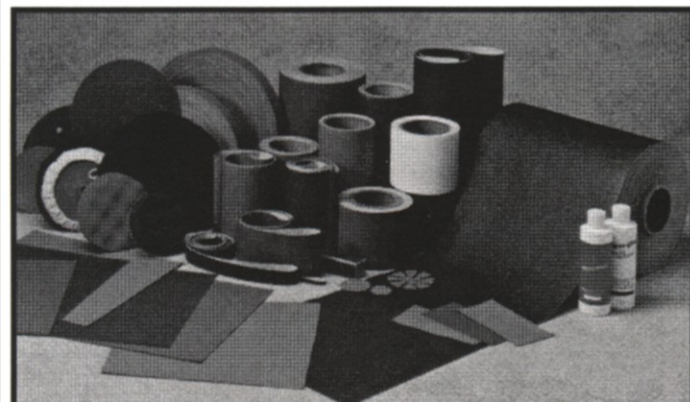



PROFESSIONAL WOODWORKER'S KIT 3KWOOD

- 2 - 3" X 6" SHEETS 1500 MICRO-MESH
- 2 - 3" X 6" SHEETS 1800 MICRO-MESH
- 2 - 3" X 6" SHEETS 2400 MICRO-MESH
- 2 - 3" X 6" SHEETS 3200 MICRO-MESH
- 2 - 3" X 6" SHEETS 3600 MICRO-MESH
- 2 - 3" X 6" SHEETS 4000 MICRO-MESH
- 2 - 3" X 6" SHEETS 6000 MICRO-MESH
- 2 - 3" X 6" SHEETS 8000 MICRO-MESH
- 2 - 3" X 6" SHEETS 12000 MICRO-MESH
- 1 - 3" X 3" FOAM BLOCK
- 1 - INSTRUCTIONS

THIS KIT IS DESIGNED FOR CRAFTSMEN TO REPLACE THE USE OF STEEL WOOL, ROTTENSTONE, OR PUMICE. MAY BE USED ON BARE OR FINISHED WOOD, AN EXCELLENT WAY TO SPOT MATCH FINISHES. CAN BE USED WET OR DRY TO ACHIEVE MATTE, SATIN, OR HIGH GLOSS FINISHES.